
ASSEMBLY GUIDE · HAND-CRANKED FLIP MONITOR

Dwight's Desk

The assistant to the regional manager's desk in miniature. Turn the pencil sharpener's crank and twenty pictures from the show flip across his old CRT monitor, one click at a time, while his bobblehead nods on top.

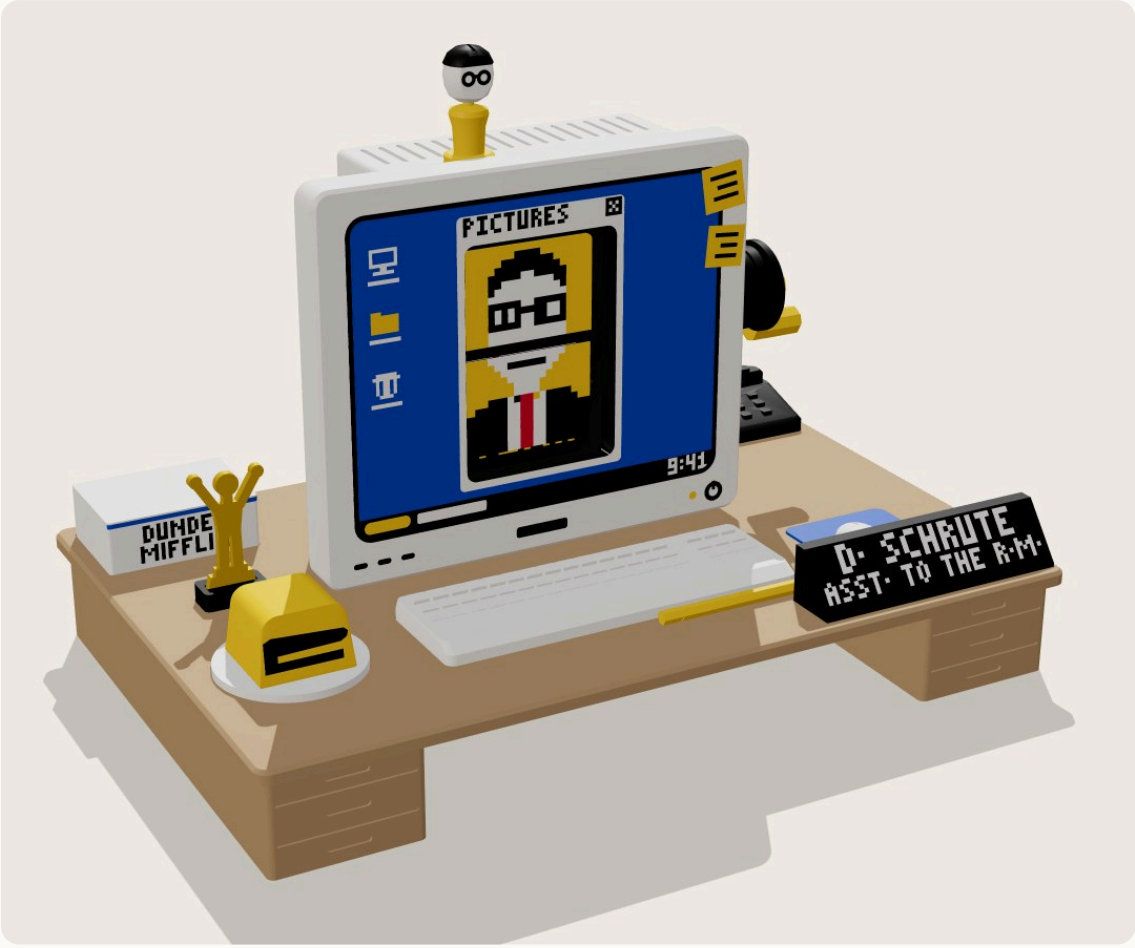

You need


All the printed parts (already in the kit)
Nothing else: no screws, glue, wires or batteries

Good to know

Every part presses, slides or clicks together, so it all comes apart again.
The desk is 240 × 160 mm; the set stands 171 mm tall to the bobblehead's hair.

BUILD


Assemble

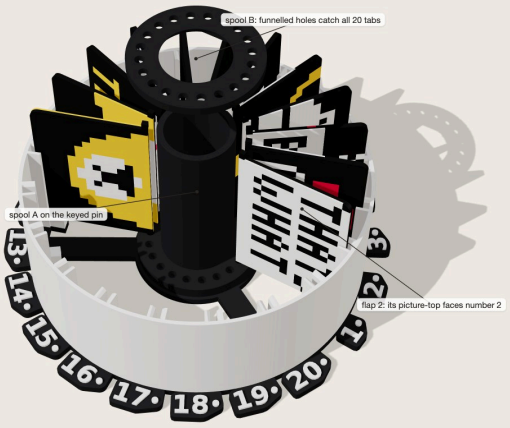

1 Load the spool


Set spool A disc-down on the loading stand's pin (plate 4). Drop flap N into the slot just right of number N, the top half of picture N facing the number.

Press spool B down the tube, lip up, until it stops on the tube's end. Its funnelled holes catch all 20 tabs. Lift the loaded spool off the stand.

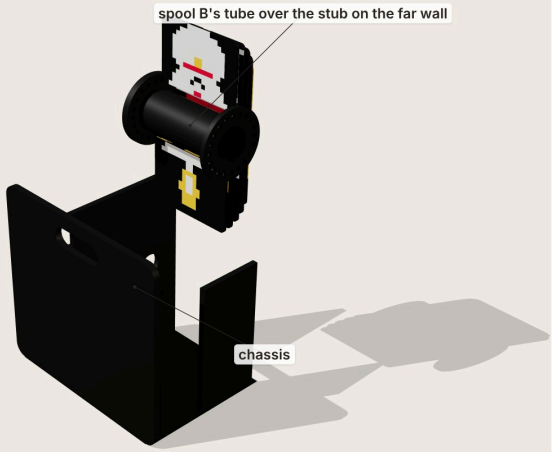

2 Spool into the chassis


Tilt the loaded spool into the chassis: spool B's tube over the stub on the far wall, spool A at the divider's round hole.

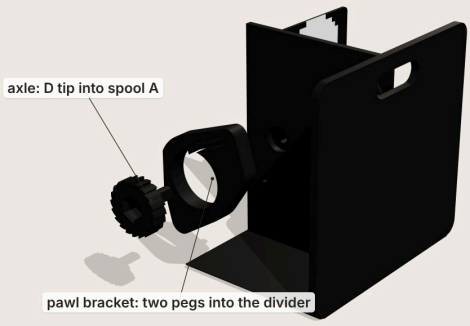

3 Axle and ratchet

Push the axle into the pawl bracket, turning it until the teeth slip past the pawl. Feed its D-shaped tip through the divider into spool A and press the bracket's two pegs into the divider's two small holes.


Turn the axle by hand: it clicks once per picture going forward and refuses to turn back.

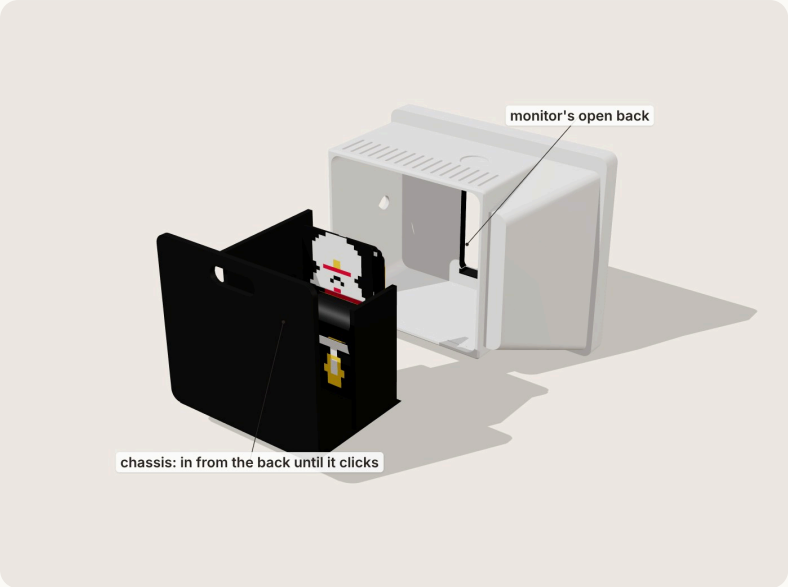

4

Into the monitor

Slide the chassis into the monitor from the back until it clicks over the ridge on the floor.

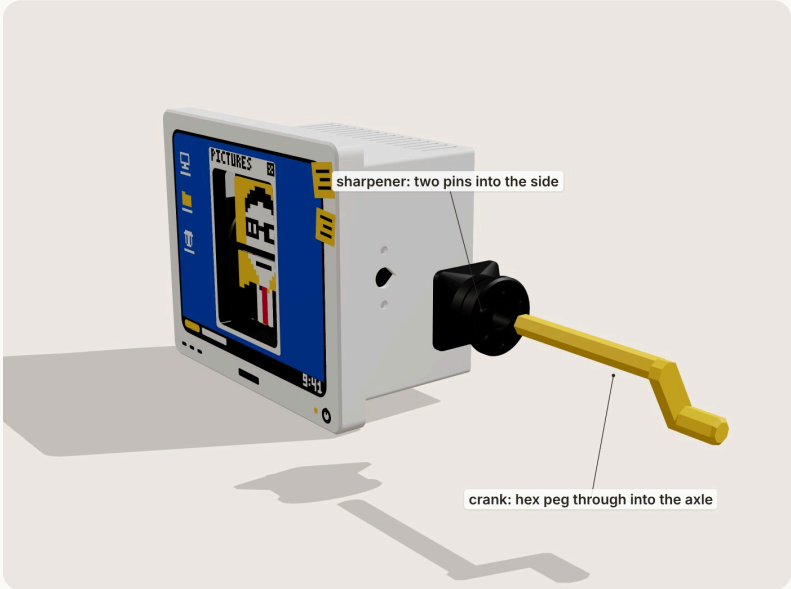


5

Sharpener and crank

Press the pencil sharpener's two pins into the two holes in the monitor's crank side.


Push the crank's long hex peg through the sharpener and the side into the axle's socket. Turn it anticlockwise (top forward): a picture flips at every click.

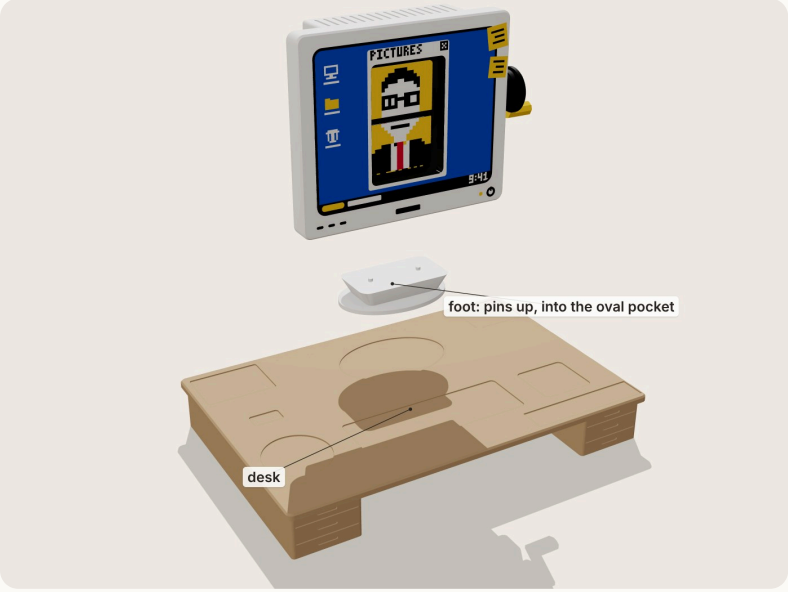

6

Onto the desk


Put the foot into its oval pocket at the back of the desk, pins up. Lower the monitor onto it, the two holes in its floor over the pins.

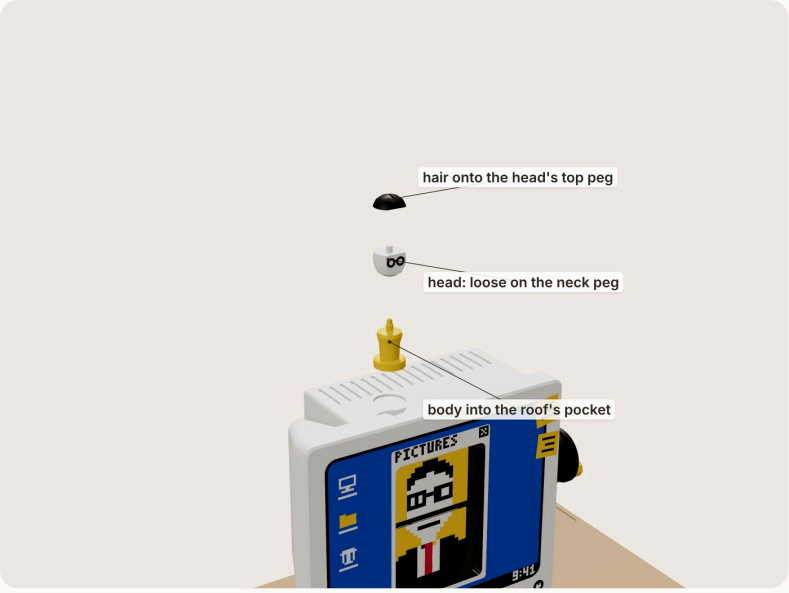

7

The bobblehead

Push the hair onto the head's top peg. Rest the head loose on the body's neck peg, and stand the body in the pocket on the monitor's roof. Tap the head: it nods.

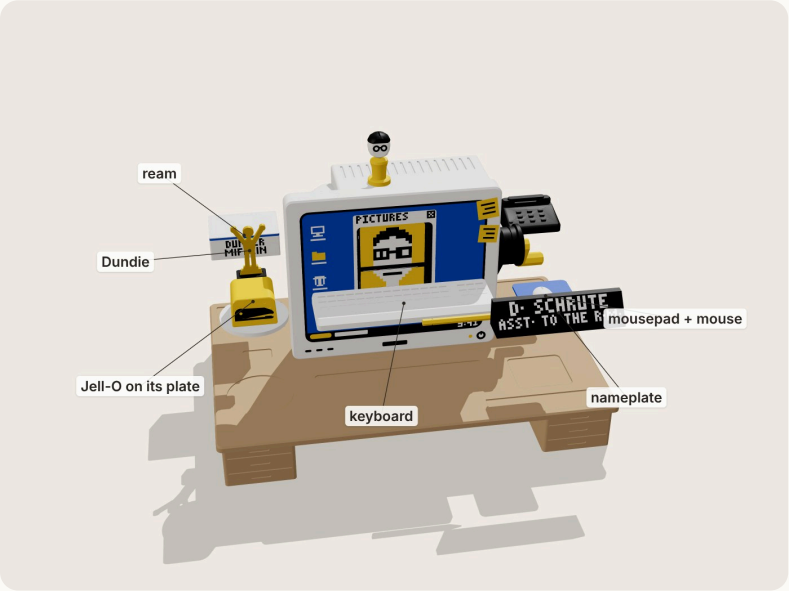

8

Dwight's things

Everything sits in a shallow pocket: the keyboard in front of the monitor, the mousepad and mouse by the crank, the nameplate at the front corner and the phone at the back corner. On the other side: the Jell-O on its plate, the ream and the Dundie in its base.

The pencil lies loose in front of the keyboard.

PLAY

The twenty pictures

Turn the crank anticlockwise, top forward. Each click flips one picture, in this order:



1. THAT'S WHAT SHE SAID
2. Pam's candy jar
3. World's Best Boss mug
4. Kevin's chili
5. the Dundie
6. NO!
7. Serenity by Jan
8. Pretzel Day
9. Jim and Pam's teapot
10. Ryan's toaster-oven fire
11. BIG TUNA
12. Dwight
13. bears
14. beets
15. Battlestar Galactica
16. Schrute Farms
17. Angela's cat
18. Office Olympics medal
19. the documentary camera
20. Party Planning Committee hat

If something is off

The two halves of a picture don't match	The flaps went in the other way round. Reload them in reverse order.
A picture rests half-flipped	Spool B isn't fully down: press it until it stops on the tube's end, so every tab sits in its hole.
The crank turns but nothing flips	The crank's hex peg isn't in the axle's socket. Push it fully home.
The axle turns backwards	The pawl bracket's pegs aren't fully in the divider. Press them home.
A press fit is tight	Sand it a little. Write to me if a small piece is off and I'll sort a replacement.